
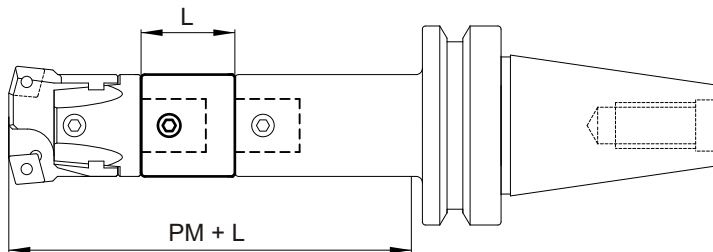


ACCESSORIES


EXTENSION PIECES

SIZE	Dimension				Product Number	Kg.	Coupling Screw
	øD	øD1	øD2	L			
22	22	12	12	20	P 022 020	0.060	TC 022
	22	12	12	30	P 022 030	0.090	TC 022
27	27	15	15	30	P 027 030	0.140	TC 027
	27	15	15	45	P 027 045	0.200	TC 027
32	32	20	20	35	P 032 035	0.210	TC 032
	32	20	20	52	P 032 052	0.300	TC 032
42	42	24	24	40	P 042 040	0.410	TC 042
	42	24	24	60	P 042 060	0.620	TC 042
54	54	28	28	50	P 054 050	0.880	TC 054
	54	28	28	75	P 054 075	1.320	TC 054
68	68	36	36	60	P 068 060	1.660	TC 068
	68	36	36	90	P 068 090	2.480	TC 068
85	85	50	50	70	P 085 070	2.940	TC 068
	85	50	50	105	P 085 105	4.420	TC 068
100 200	100	60	60	80	P 100 080	4.580	TC 100
	100	60	60	120	P 100 120	7.060	TC 100

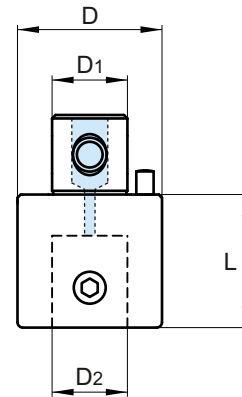

COOLANT-FEEDING EXTENSIONS (PROVIDES FLOOD COOLANT)

SIZE	Dimension				Product Number	Kg.	Coupling Screw
	øD	øD1	øD2	L			
22	22	12	12	30	P 022 030 R	0.090	TC 022
27	27	15	15	30	P 027 030 R	0.140	TC 027
32	32	20	20	35	P 032 035 R	0.210	TC 032
42	42	24	24	40	P 042 040 R	0.410	TC 042
54	54	28	28	50	P 054 050 R	0.880	TC 054
68	68	36	36	60	P 068 060 R	1.660	TC 068
85	85	50	50	70	P 085 070 R	2.940	TC 068
100 200	100	60	60	80	P 100 080 R	4.580	TC 100

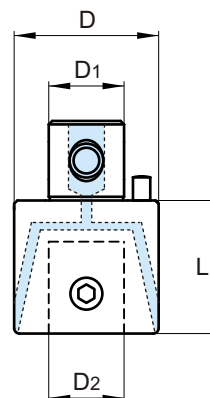

NOTE: Arbors to match with coolant-feeding extensions must be ordered by adding "R" at the end of the product number.

Standard Execution:

BT 340 022 050

Coolant Execution:

BT 340 022 050 R